

Moving the X-Trend to a new computer

When you have bought a new computer and want to move the X-Trend with all the databases to the new computer, you must do the following:

1. save the database(s) to a server or to a moveable media,
2. install the X-Trend software on the new computer,
3. copy the databases to the new computer,
4. register the database(s) and
5. change the active database in the X-Trend.

Saving the database(s) on a server or a moveable media

You can normally find your databases in the folder *c:\Program files\Xtrend\VDData*. An X-Trend database has an extension *.sp3*. If you are going to shut down your old computer before starting the new one, you must copy your databases to a server or to a moveable media, for example a CD-Rom or a USB memory.

Installing the X-Trend software


1. Close all the Windows applications!
2. Place the installation CD-ROM in the CD-ROM driver!
3. Follow the instructions from the screen!




Copying the databases to the new location

When you have installed the X-Trend on the new computer, you can save the database(s) in the (most used) folder *c:\Program files\Xtrend\VDData*.

Registering the database(s) in X-Trend

Start the X-Trend software!

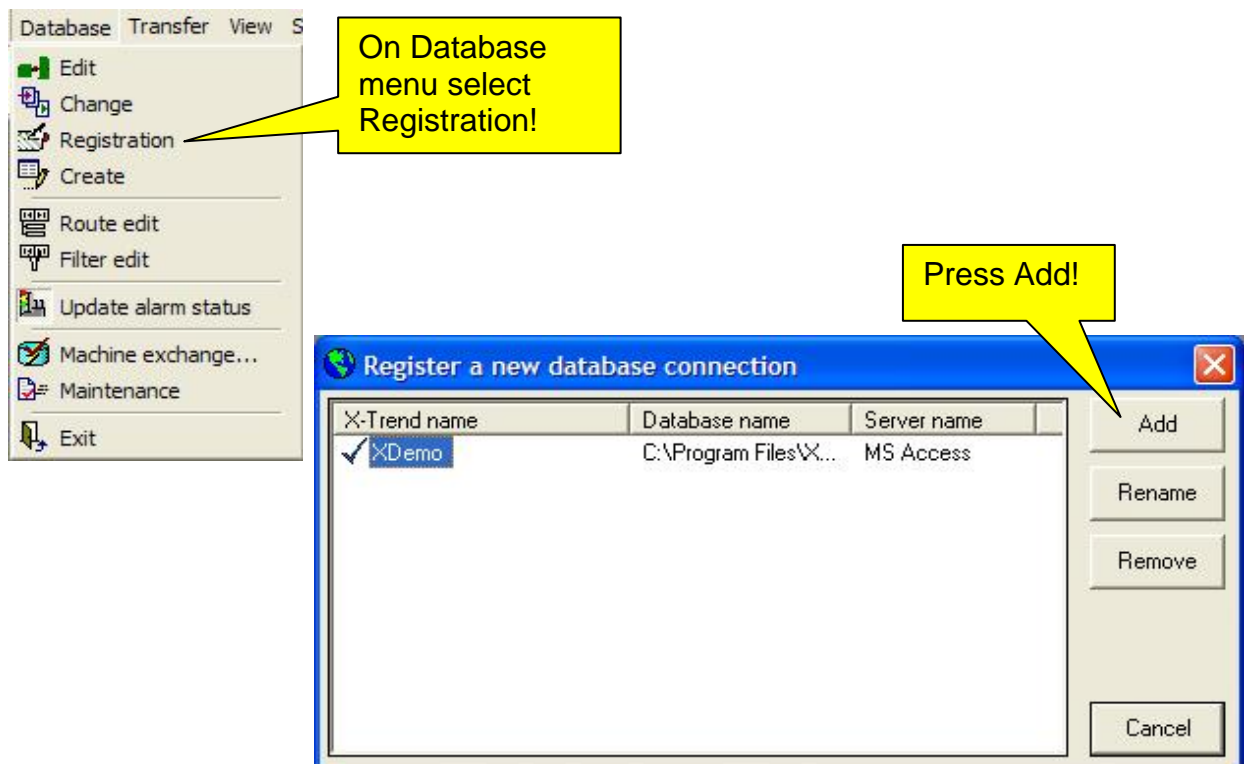

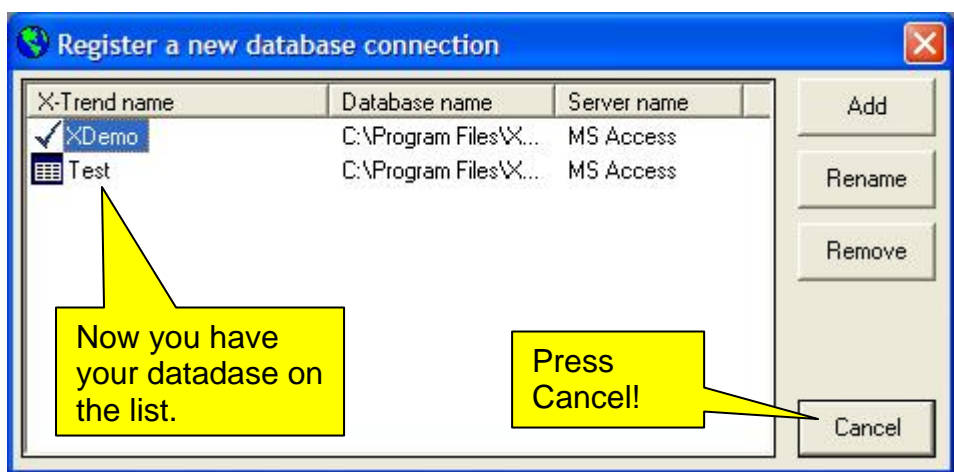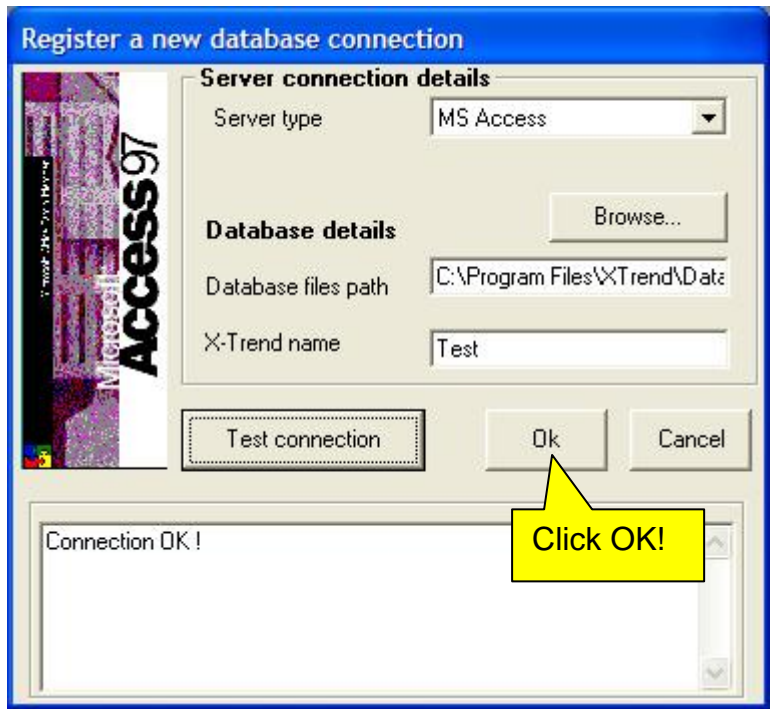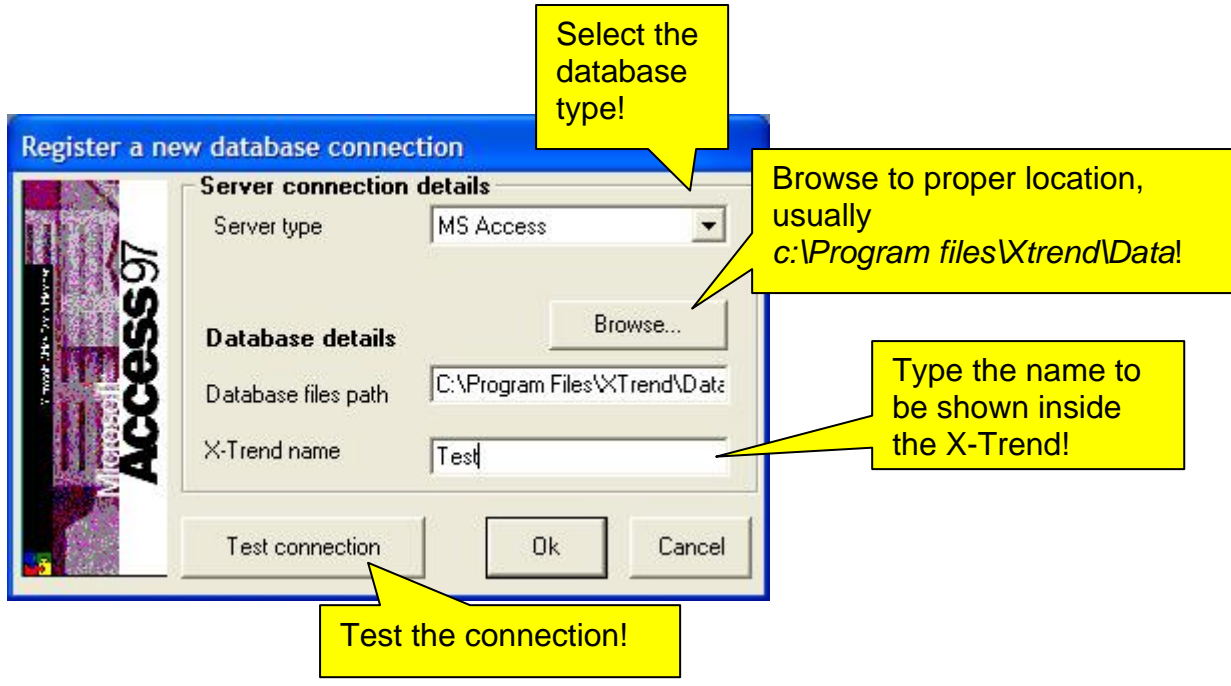


Changing the active database

When the X-Trend software has been installed the XDemo is activated by default. That's why you need to change the active database.




On Database menu select Change!

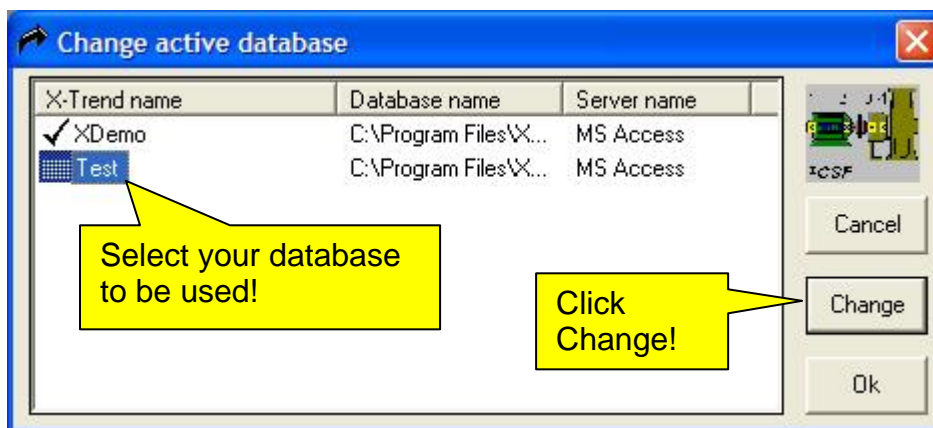

Select your database to be used!

Click Change!

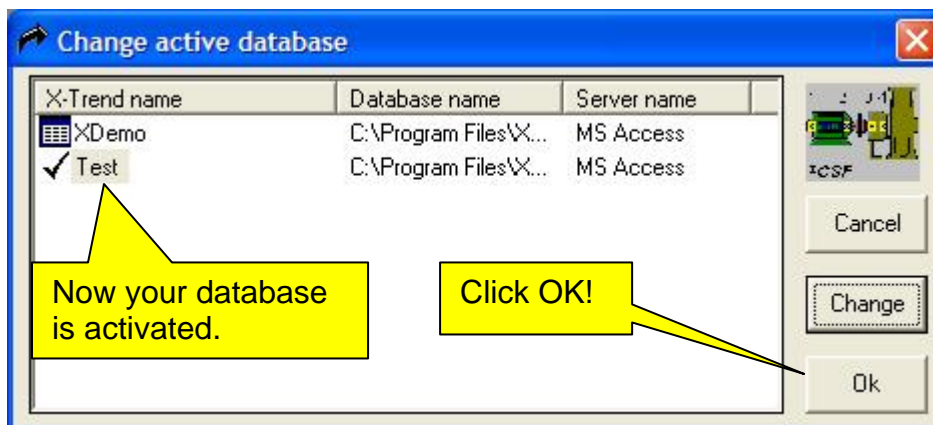

Now your database is activated.

Click OK!

Now you can use the database.